



USER MANUAL

Mobeye® CM4410

fire alarm communicator

Accessory for Ei Electronics fire detectors

SW 2.n



CONTENTS

1.	General description	3
2.	Standard behaviour	4
2.1	Mobeye CM4410 with Mobeye SIM and Internet Portal	4
2.2	Mobeye CM4410 with own SIM card	5
3.	Getting started	6
3.1	Insert the SIM card and the batteries	6
3.2	Network connection and program mode	7
4.	Programming when using the Mobeye SIM and portal	8
4.1	Sign up in the Mobeye Portal	8
4.2	Register the Mobeye SIM card	8
4.3	Configuration and synchronisation	9
4.4	Basics of the Mobeye Portal	9
5.	Possible settings	12
5.1	Alarm phone numbers	12
5.2	Test message	12
5.3	Call and/or SMS (own SIM cards)	13
5.4	Power and power failure message	13
5.5	Notification to private emergency center	13
6.	Mount the CM4410 and perform a test	14
6.1	Mount the CM4410 housing to the ceiling	14
6.2	Connect the EI detector and close the cover	14
6.3	Perform a test	15
7.	Programming when using own SIM card	16
7.1	Program mode	16
7.2	Programming the settings by SMS	16
7.3	Programming the 4G LTE-M settings	17
7.4	Program at least one telephone number	17
7.5	List of SMS commands	18
7.6	SMS reports when using your own SIM card	19
7.7	Technical messages	20
8.	Combination with other Ei detectors and a wireless network	21
9.	System reset and system feedback	22
9.1	System reset	22
9.2	Status feedback	23

Attention!

This user manual contains important guidelines for the installation and usage of the Mobeye® device as described in this manual. Please read these thoroughly before you start using the Mobeye® device.

In the case of damage caused by disregarding the guidelines and the instructions for use, no liability is accepted and the warranty becomes void. The user must regularly check the proper functioning of the Mobeye® device. The manufacturer cannot be held liable for (direct and indirect) damage as a result of incorrect operation or incorrect functioning of the device, software, internet or telecom connection. The manufacturer is in no way liable for the loss of personal passwords or codes.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than 0 °C and not higher than 40 °C).
- The device is intended for use in dry and clean places with a residential function.
- Protect the device from moisture, heat and water splashing.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending messages and making calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

This product contains recyclable components. When disposing of this product, please take it to a waste collection point for disposal or to your sales point. Bring empty batteries to a recycling centre or collection point.

1. GENERAL DESCRIPTION

The Mobeye GSM fire alarm communicator CM4410 is a battery operated monitoring device with integrated communication module used to send alarm notifications after the input is triggered by a Ei Electronics smoke or heat detector.

The Mobeye 4G Smoke Detector CM4400 is a combination of the Ei650iC (by Ei Electronics) and the Mobeye CM4410. For other combinations see chapter 8.

In order to activate the device, a few steps are to be followed.

First of all, you need to insert a SIM card. With the Mobeye SIM card, the CM-Guard uses the 4G LTE-M network. This network has a strong network coverage, deep penetrability in buildings and also works in remote areas. The Mobeye SIM card is a 'multi-provider' and can be used internationally; it may choose from several providers per country. In case of a network problem it will switch to another provider or fall back to 2G. In addition, the Mobeye SIM card offers access to the Mobeye Portal . This management environment gives the device essential functions such as online programming, display of status and history, extensive possibilities for reporting messages and will also monitor test messages (keep alive).

Optionally, alarm messages are sent as a push message via an app. The relevant contact person will receive instructions and an installation link on their phone.

It is possible to place your own SIM card. This means that the functions of the Mobeye Portal will no longer apply. Communication is primarily via the 2G network. The most important alarm functions, such as calling and/or texting after an alarm, also work. If 2G is not available, the device will try to connect to 4G LTE-M. Only if the SIM card is suitable for this telemetry network and the correct APN has been set, communication via SMS (and call if the provider supports this) is possible.

Where the installation steps differ for both modes of use, this is indicated. The use of the Mobeye Portal with Mobeye SIM card is also referred to as Mobeye SIM/Portal.

2. STANDARD BEHAVIOUR

2.1 MOBEYE CM4410 WITH MOBEYE SIM AND INTERNET PORTAL

The Mobeye fire alarm communicator CM4410, with Mobeye SIM card and registered on the Mobeye Portal , has the following behaviour as factory settings:

- In case the Ei Electronics fire detector activates the input of the Mobeye CM4410, sends an alarm message to the Mobeye Portal . The Portal forwards the alarm as push notification, call (spoken message), text message and/or e-mail to the 'alarm contacts'.
- When the batteries need to be replaced, the Mobeye GSM communicator (CM4410) sends a 'low battery' message to the Mobeye Portal . The portal forwards this to the 'service' contacts.
- The unit will send test messages to the portal as communication check (default: every 7 days). If these are not received in time, the portal sends an exception message to the 'service' contacts.

Chapter 5 describes how to influence the standard behaviour.

Communication between the Mobeye CM4410 and the Mobeye Portal takes place via data (and SMS as fallback). Messages can be sent as a push message to the Mobeye Messages app (via the portal). If a contact confirms the receipt of the message, the subsequent contacts will not receive it (alternatively a group message is possible). If the message is not confirmed (or the app is not used), it can still be sent by call (with spoken text). SMS and email are also possible. A credit system applies to calling and SMS texting, the other methods are unlimited. At initialisation and contract renewal, a starting credit is loaded, which is sufficient for most users. In the event of a low balance, the account holder will receive an email with the advice to top up online. The credit balance has an unlimited validity period and applies to all devices under one account.

2.2 MOBEYE CM4410 WITH OWN SIM CARD

The Mobeye fire alarm communicator CM4410, equipped with your own SIM card, has the following standard behavior as a factory setting:

- In case the Ei Electronics fire detector activates the input of the Mobeye communicator (CM4410), the alarm module sends an alarm SMS text message and calls the phone numbers as programmed in by the user.
- When the batteries need to be replaced, the Mobeye GSM communicator sends a 'battery low' SMS text message to the first telephone number.

Chapter 5 describes how to influence the standard behaviour.

3. GETTING STARTED


To get started with the Mobeye GSM fire alarm communicator CM4410, at least the following steps need to be taken in the following order:

1. Insert the SIM card and the batteries
2. Programming when using the Mobeye SIM/Portal
 - a. Sign up in the Mobeye Portal
 - b. Activate the SIM card and the device
 - c. Enter the program mode
 - d. Program the options and synchronise
 - e. User of the portal and the app
3. Programming when using your own SIM card
 - a. Enter the program mode
 - b. Program the settings
4. Mount the Mobeye CM4410 to the ceiling
5. Connect the Ei Electronics detector and close the cover
6. Perform a test

Step 3 is described in chapter 7.

3.1 INSERT THE SIM CARD AND THE BATTERIES

Follow the steps in the picture to insert the SIM card into the module.

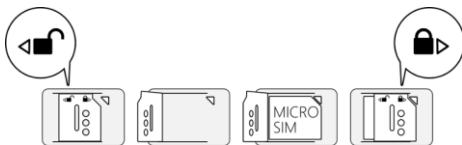

When using the Mobeye SIM card:

The supplied SIM card has a PIN code protection, which means that it can only be used in the Mobeye device. **Note:** do not place it in another device.

When using your own SIM card:

An own SIM card has a "micro" format, is suitable for the 2G network and can make calls and send text messages. The PIN code is "0000", or the SIM is PIN code free.

(A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu.)

NB: The settings are saved in the device memory.

Insert the batteries

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement.

3.2 NETWORK CONNECTION AND PROGRAM MODE

After placing the batteries the Mobeye CM4410 will search for the network. The LED flashes green and red. This process normally takes 10-30 seconds, in a new device this can take some minutes. When the network has been established the LED will first blink green rapidly and next stay green (or flashes 1 sec. on/1 sec. off in case the unit has not been configured yet).

After 3 minutes a time-out occurs, after which the communication module switches off in order to save the batteries. In this low power mode the LED flashes once per 3 seconds. It will search for network connection once it needs to send notifications. It can be forced to establish a network connection by re-inserting the batteries.

4. PROGRAMMING WHEN USING THE MOBEYE SIM AND PORTAL

The method of programming when using your own SIM card is described in chapter 7.

4.1 SIGN UP IN THE MOBEYE PORTAL

Go to www.mymobeye.com and sign up for a new account. Follow the instructions on the screen.



You will receive an e-mail to confirm the new account. After confirmation login on the portal.

If you do not receive this e-mail, please check your spam box or ask Mobeye (info@mobeye.com).

4.2 REGISTER THE MOBEYE SIM CARD

To activate the Mobeye SIM card in the Mobeye Portal, choose 'activate SIM card' on the 'Add Device' screen.

Add Device

Fill in the SIM card number. This is the number written on the plastic SIM card below the barcode. You can take the entire number or only the last 8 digits.

Activate SIM card

If the SIM card and batteries are already installed, a pop-up will appear, where you assign a name and location to the device. You can change these later.

(If you have not installed the SIM card and batteries before, you will first be asked to select the device type, in your case it will be "CM4410".)

At the moment you accept the price and terms, you confirm the subscription. You will be taken to the payment screen. You will receive an invoice for the mentioned amount. Your new device is now visible on the dashboard.

Before the device is ready for use, first prepare the settings and alarm forwarding. See next paragraphs to learn how to do this.

4.3 CONFIGURATION AND SYNCHRONISATION

The device settings can be programmed in the Mobeye Portal . In this way you prepare the settings, to be picked up by the device. Since the Mobeye device is leading in the communication between the portal and the device, the data synchronisation is done after:

- 1) any message to the portal (regular test message, alarm, low batteries).
- 2) pushing the black button at the side of the green printed board for 5 seconds.
- 3) reinserting batteries.

4.4 BASICS OF THE MOBEYE PORTAL

Dashboard

With multiple devices, the dashboard shows all devices, with the (alarm) messages in the last 24 hours, (missed) test messages and low battery status. Select a device to go to the details of a specific device.

Status & History

The status block shows values that provide information about the unit.

If the "Synchronized" status is set to "No", there are new settings or alarm numbers that still need to be transferred to the device.

The network strength value at the last communication session is shown. If the value is lower than -95dB, consider another location for the device.

Click on the position icon to see the geographical location during the last report. Note: this is an indication based on "cell-id".

The history displays all historical events. Click on "all events" to see the overview.

Device Settings

The device settings can be changed via the Mobeye Portal . To do this, click on the "edit" icon and type in the security code (factory setting is "1111"). See chapter 5 for the description per setting.

After saving the new settings, they must be retrieved by the device (synchronized). See 4.3 for more information about synchronizing.

The device data contain the name and location of the device and can be changed here. These texts are mentioned in every text message and e-mail message to indicate the device. A free text is available as an internal comment field (not included in reports).

Alarm dispatch and the Mobeye app

In the block "Contacts for messages" you link the contact persons who receive alarm and service messages via push notification, call, text message and/or e-mail. Service messages can be warnings about missed test messages and low battery voltage. To add a contact person, first create it as a contact. This can be done via the  or in the main menu under the blue Contacts tab. For push notifications, install the  Mobeye Messages app from the Play Store/App Store on the phone.

- Select "App message" for a push notification. A contact will then (once) receive a code via SMS to register in the app.
- Optionally select "Voice call" as a fallback: If none of the contacts confirm the app message, a voice call will follow.
- If no app message is set for a contact, but call is set, this call is always made (regardless of whether other contacts receive push notifications).
- If SMS and/or email is set up for a contact, this is always sent (possibly alongside the app message).
- An app message can be sent as a group message (to all contacts at once) or via an escalation plan (where a "confirmation" prevents the app message from being forwarded to a next contact).
- When selecting "Escalation", adjust the order with the arrows ▲ and ▼.

Hints:

- Always include an email contact for service notifications.
- During testing, we recommend using the app and email (and minimizing calls and texts) to save on credit.
- If the app asks for a new code or a contact has a new phone, send it from the contacts tab (change contact).

Message texts

The message texts contain the texts that, in addition to the name and location, are included in the messages. These texts can be adapted to your own text.

5. POSSIBLE SETTINGS

The Mobeye fire alarm communicator CM4410 has setting options that influence the behaviour of the module. If connected on the Mobeye Portal , the settings are prepared in the portal (see chapter 4). If your own SIM card is used, programming is done via SMS commands (see chapter 3).

5.1 ALARM PHONE NUMBERS

When using Mobeye Portal : an unlimited number of contacts can receive the alarm messages. These are set in the portal.

When using your own SIM card: the Mobeye CM4410 can inform 5 telephone numbers in the event of an alarm. It is mandatory to set at least one number (TEL1). The numbers set are used for the telephone calls and/or SMS messages from the unit.

5.2 TEST MESSAGE

When using the Mobeye Portal : The Mobeye GSM fire alarm communicator CM4410 can send regular test messages (*keep alive*) to the Mobeye Portal , to ensure the proper functioning of the unit. The test message will also be sent if the unit is disarmed. The Mobeye Portal expects the test message and checks the timely receipt. The monitoring of the test messages follows the 'management by exception' rule: only if the message was not received, the 'service' contacts will receive a notification.

The timing of the test message can be programmed. Since new settings (options) will be synchronised after the test message, setting a specific time of the test message can help the process of remote programming. Example: if you force a daily test message at 17.30 hrs, you can prepare new settings and be sure they are loaded into the device before the evening.

The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "7" (weekly test message).

When using your own SIM card: The Mobeye fire alarm communicator CM4410 can send regular test SMS messages (*keep alive*) to the first phone number (TEL1), to ensure the proper functioning of the unit. The timing of the test message is determined by the time of programming. The test time can also be programmed. The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "0" (no test message).

5.3 CALL AND/OR SMS (OWN SIM CARDS)

When using your own SIM card, by default the CM4410 will call and send SMS text messages. It is possible to suppress one of these. By turning off the CALL, the unit will only send SMS text messages. By turning off the SMS, it will only call. The default both values are set to "ON".

5.4 POWER AND POWER FAILURE MESSAGE

If it is wished to apply an external power source, the CM4410 can be extended with the AC-FA-EP power supply module. This is an extension of the PCB inside the CM4410 and comes with a 12VDC ~230V mains adapter.

the Mobeye CM4410 is supplied with external power and the power fails, it can send alarm messages. If the setting is "OFF", no message is sent. When set to "ALARM", notifications are sent to the set contacts. When using your own SIM card, the setting "ALERT" only results in an SMS notification to TEL1. The default setting is "ALARM" for portal use and "ALERT" for own SIM cards.

The power failure delay time avoids false alarms caused by short power failures.


5.5 NOTIFICATION TO PRIVATE EMERGENCY CENTER

The Mobeye CM4410 can send the reports to a control room using the standard SIA DC09 protocol. This requires the use of the Mobeye SIM/Portal. Contact Mobeye for information.


6. MOUNT THE CM4410 AND PERFORM A TEST

6.1 MOUNT THE CM4410 HOUSING TO THE CEILING

Mount the housing in which the module is fixed to the desired place to the ceiling, using the plugs and screws which can be found inside the Ei Electronics box. Please refer to the Ei Electronics manual for the ideal location and installation method.

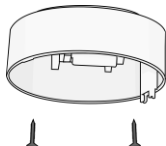

6.2 CONNECT THE EI DETECTOR AND CLOSE THE COVER

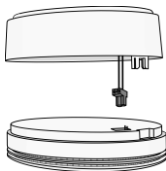



Remove the back cover from the Ei Electronics detector. The CM4410 will be used as back cover.

Press the green cabled connector to the pins of the Ei Electronics detector. Next to the pins the text 1 2 is written.

The connector is properly fitted if the orange wire is above 1 and the blue wire is above 2.

Hold the Ei detector to prevent tension on the wires!

  Bring the Ei Electronics detector and the back cover with GSM module to each other at the correct position and turn the detector gently clockwise until it is closed and locked. In the Ei detector a red light will flash regularly.



6.3 PERFORM A TEST

After the previous steps, the fire detector is operational.

In order to execute a test, press the TEST & HUSH (or TEST & STUMM) button of the Ei detector during a few seconds (this can take up to 5 seconds). Hold it for another five seconds after the siren starts sounding. Now the communicator will establish network connection to send the notification to the contact persons.

Note: make sure the cover is closed, so that the fire detector and the CM4410 are locked.

7. PROGRAMMING WHEN USING OWN SIM CARD

If your own SIM card is used, programming proceeds via SMS commands. For this purpose the communication module requires network connection. After programming the units needs to be mounted and tested as described in chapter 6.

7.1 PROGRAM MODE

The Mobeye CM4410 switches to the program mode after placing the batteries. First the communication module establishes network connection. During this time the LED flashes green and red. Next it will shortly flash very fast. Within 10-30 seconds the connection is established and the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

During the first 3 minutes, the communication module remains active, ready to receive SMS commands. After 3 minutes a time-out occurs and the communication module switches off in order to save the batteries.

7.2 PROGRAMMING THE SETTINGS BY SMS

When using your own SIM card, all settings are programmed in by SMS text messages:

1. Make sure the CM4410 is in program mode (please refer to 7.1).
2. Send an SMS text message with the (security) code and the command.
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages have the following content:

CODE COMMAND:OPTION

Example: **1111 TEL1:+44772345678**

- CODE stands for the security code, factory setting is 1111.
- Do not forget the space character between (security) code and command.
- The commands are case insensitive.

- Each command needs to be sent in a separate SMS text message.
- All settings are saved and remain saved, even when the unit has no power or the batteries are removed.

In chapter 5 the options are explained.
In chapter 0 all possible SMS commands are listed.

7.3 PROGRAMMING THE 4G LTE-M SETTINGS

The Mobeye CM4410, equipped with its own SIM card, will primarily search for the 2G network. If 2G is not available, it will try to connect to the 4G LTE-M network. This is only possible if the SIM card is suitable for this and the APN settings of the provider are set correctly. For some providers these are automatically correct. For other providers these must be set via SMS command (APN, APNLOGIN, APNPASSWORD. Please note that not all providers can call via the LTE-M network.

7.4 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The Mobeye CM4410 is able to send messages up to 5 telephone numbers. The first telephone number (TEL1) is mandatory. This number will receive, next to alarm message, also system messages such as battery low and keep-alive message. The telephone number TEL1 is programmed via an SMS command. This can be done from any telephone, making it possible to program someone else's number. The TEL1 telephone will receive a confirmation text message with the security code.

SMS command 1st telephone number:	CODE TEL1:
example:	1111 TEL1:07212345678
	 similar for TEL2 ... TEL5

To program international numbers, start with 00 followed by the country code (for example 0044123456789).

example:	1111 TEL1:0044612345678
----------	-------------------------

7.5 LIST OF SMS COMMANDS

When using your own SIM card, the settings are programmed via SMS commands. See chapter 7 for the programming method and chapter 5 for an explanation per setting. The commands are case insensitive.

Setting	SMS Command	Options	Default value
Change security code	INSTCODE:	0000---9999	1111
Set telephone number for alarm messages	TEL1: - TEL5:		Empty
Delete telephone number	DEL1 - DEL5		
Identification text	NAME:	20 characters	Mobeye
Interval 'test SMS'	TEST:	0---30 (days)	0
Time test message	TESTTIME:	hhmm	
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Alarm text input 1	TEXT1:	20 characters	Fire alarm!
Actual time	TIME:	hhmm	Empty
Actual date	DATE:	yyyymmdd	Empty
APN for 4G LTE-M	APN:		
APN user name	APNUSER:		
APN password	APNPASSWORD:		
APN reset data	APNRESET		

Examples:

Set phone number 1: 1111 TEL1:0712345678

Delete phone number 1: 1111 del1

Be aware of the space between "1111" and the command.

7.6 SMS REPORTS WHEN USING YOUR OWN SIM CARD

Several lists and status reports can be retrieved by sending an SMS text message to the Mobeye CM4410, from any telephone number. Before sending the request, make sure the unit is in the program mode (please refer to 7.1).

Upon sending the command, the Mobeye CM4410 returns an SMS text message to the originator of the request. The commands are case insensitive.

STATUS REQUEST

The status can be requested by sending following SMS text message. The status includes the status of the input, power and batteries.

SMS command status request:	STATUS?
example:	1111 STATUS?

LIST OF SETTINGS

The settings can be requested by sending following SMS text message:

SMS command list basic settings:	SET?
example:	1111 SET?

LIST OF PHONE NUMBERS

The list of phone numbers can be requested by following SMS text message:

SMS command list of phone numbers:	CALL?
example:	1111 CALL?

7.7 TECHNICAL MESSAGES

In the event of technical issues the administrator receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced.
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode.
Low batteries, no external power supply	No external power supply, batteries need to be replaced.
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced.
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.
Batteries too low. Module shutting down.	The module has shut down due to low voltage. Replace the batteries or connect the power supply to restart the unit.
Module restarted. Power supply [status]. Batteries [status].	The module has been able to restart after a shutdown.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible. During the battery replacement, the SIM card does not have to be removed.

8. COMBINATION WITH OTHER EI DETECTORS AND A WIRELESS NETWORK

The CM4410 can be combined with the Ei650iC smoke detector (and from previous series: Ei605TYC smoke detector, Ei603TYC heat detector). The CM4400 is a combination of the CM4410 and the Ei650iC.

The CM4410 can operate in various combinations:

- CM4400 standalone: in the event of a fire, the smoke detector siren sounds on-site and the alert is sent via the CM4410 to the configured contacts.
- CM4400 in a wired network: the Ei650iC can be connected by wire to other wired Ei Electronics smoke, heat, and CO detectors. In the event of a fire, all detectors sound and the alert is sent via the CM4410 to the configured contacts.
- CM4400-RF in a wireless network: The Ei650iC smoke detector, equipped with the Ei600MRF radio frequency module, can be wirelessly paired with other Ei Electronics detectors. These can be any connectable detector from the Ei600 and Ei650 series. Only the Ei650iC needs to be equipped with the CM4410 communication module. In the event of a fire, all detectors will sound, and the notification will be sent to the configured contacts via the CM4410.

Note

- The CM4410 can be powered externally using the AC-FA-EP accessory.
- Another way to create a wireless network with connectable Ei Electronics detectors, without the CM4410, is to use the Ei428RF relay module and the Mobeye PowerGuard. The Ei428RF and the CM4100 are both powered by external voltage.

9. SYSTEM RESET AND SYSTEM FEEDBACK

9.1 SYSTEM RESET

To reset a Mobeye CM4410 two steps are necessary, in following sequence:

1. Delete the Mobeye CM4410 from the Mobeye Portal (if relevant)
2. Reset the Mobeye GSM fire alarm communicator CM4410

1. To delete the Mobeye CM4410 from the Mobeye Portal

If connected to the Mobeye Portal , first delete the device from the Portal. The SIM card could be then reused for another Mobeye device, or the same device can be connected again.

In the device list, click the name of the device to go to the details screen. Next choose 'Device'. Click 'delete' to delete the device and confirm the option.

The SIM card will be disconnected from the device and visible on the first screen.

2. To reset the Mobeye CM4410

To reset the Mobeye CM4410 to its factory settings:

1. Remove the batteries and the SIM card.
2. Press the small black button at the side of the PCB (behind one of the grey pillars) while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.

After a successful reset, the LED will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

9.2 STATUS FEEDBACK

LED pattern	Status	Required action
Blinking green / red every second	Module establishes network connection	Wait until the network connection is established.
Blinking green, 1 second on / 1 second off	Module not configured (own SIM card)	Configure at least one telephone number.
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required.
1 red flash every 3 seconds	Module is switched on, powered by batteries, batteries are low	Replace batteries.
On (green)	Module is switched on, externally powered	No action required.
Off	Module is switched off	Verify if this is desired. If button does not respond, check batteries
2 flashes red, every 3 seconds	No network connection	Restart the module. Try again in a different location.
3 flashes red, every 3 seconds	SIM card failure (own SIM: no credit)	Restart the module. Own SIM: check SIM card in regular telephone, check credit, replace SIM card.
4 flashes red, every 3 seconds	Incorrect PIN on SIM, SIM card required PUK	Set PIN in regular telephone to 0000 or contact Mobeye.
Blinking 3 times green	Successful SMS configuration	No action required.
Blinking 5 times red	Faulty SMS configuration action	Check SMS command.
4 red flashes every 3 sec., short green in between	Low batteries	Replace both batteries.
Flashes green/red simultaneously	Retrieving new firmware from Mobeye server	Wait fifteen minutes.
Quickly flashing green	Date exchange with portal	No action required

Technical specifications

Communication module	: 4G LTE-M, Fallback 2G 900/1800 MHz
Batteries	: 2* CR123 (lithium) recommended: Varta, Panasonic and Energizer (please no Duracell or Philips)
Battery life in normal mode	: > 1 year (battery operated)
Power consumption low power	: ca. 50 μ A stand-by / max. ca. 500 mA
Ambient temperature	: 0 °C until +40 °C

This manual is published by Mobeye®.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing.
Changes in technology and equipment are reserved.

© Mobeye, version CM4410-EN250901



Declaration of Conformity

Herewith we, Mobeye, declare that the

Mobeye CM41 telemetry module

And the derived products

CM4000, CM4001, CM4040, CM4042, CM4100, CM4200, CM4300, CM4300-FS, CM4410,
CM4500, CM4600, CM4610, CML4015, CML4055, CML4255, CML4275, CMVXI-R, iCM41,
MCK400, MCK401

are in compliance with the essential requirements of the following European standards / EU Directives:

Directive 2014/35/EU (low voltage directive)

Directive 2014/30/EU (electromagnetic compatibility)

Directive 2014/53/EU (RED)

The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

EN 62368-1:2014+A11:2017 / EN 62479:2010 / EN 50385:2017
EN 301 489-1 V2.2.3 / Draft EN 301 489-19 V2.2.0 /
Draft EN 301 489-52 V1.1.2
EN 301 511 V12.5.1 / EN 301 908-1 V13.1.1 / EN 301 908-13 V13.1.1 /
EN 303 413 V1.1.1

Mobeye B.V.
Poeldorckweg 5
5216 JX 's-Hertogenbosch
The Netherlands

Date: 12 January 2024
Name: J.P.K. van de Vijver
Position: Managing Director
Signature: 



mobeye®
security.anywhere.anytime.

